



## HS-1920TC, thermal IP camera system

### Hardware installation tips: mounting



1. Mount it to tripod head directly with one of the screw holes, or
2. Mount it with the standard bracket on the wall, or
3. Mount it with an extra bracket on the tripod for multi-angle purpose